


LS10 extreme

center of gravity (CG) 82mm / center of gravity without wing ca. 75mm

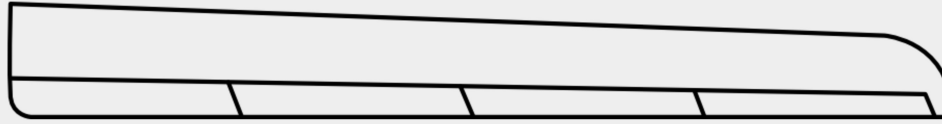

flight mode

normal		0		0				0		↑ 17 ↓ 11			
normal	Quer	↑ 12	↓ 10	↑ 12	↓ 10	↑	↓	↑ 17	↓ 15			40mm/15%Combi switch	
normal	Snapflap	↓ 5		↓ 5		↓		↓ 4					
speed		↑ 3		↑ 3		↑		↑ 3				40% expo	
speed	Quer	↑ 15	↓ 9	↑ 23	↓ 14	↑	↓	↑ 28	↓ 18				
speed	Snapflap	↓ 5		↓ 5		↓		↓ 4					
best gliding		↓ 3		↓ 3		↓		↓ 2				15% combiswitch	
best gliding	Quer	↑ 12	↓ 10	↑ 12	↓ 10	↑	↓	↑ 17	↓ 15				
best gliding	Snapflap	↓ 5		↓ 5		↓		↓ 4					
thermal		↓ 6		↓ 6		↓		↓ 5				15% combiswitch	
thermal	Quer	↑ 12	↓ 10	↑ 12	↓ 10	↑	↓	↑ 17	↓ 15				
thermal	Snapflap	↓ 5		↓ 5		↓		↓ 4					
start		↓ 10		↓ 10		↓		↓ 9				30% combiswitch	
start	Quer	↑ 15	↓ 12	↑ 15	↓ 12	↑	↓	↑ 28	↓ 18				
start	Snapflap	↓ 5		↓ 5		↓		↓ 4					
butterfly		↓ 60		↓ 56		↓		↑ 0		↓ 7			
butterfly	Quer	↑ 0	↓ 0	↑ 0	↓ 0	↑	↓	↑ 28	↓ 18				

data in degrees (°)

Very important when **setting the center of gravity**: If the CG is correct the plane will not make an turn over the wing by very slowly speed, only takes the nose down. If not, you have to take weight in the nose!!